



**VISIPAK®**  
**Packaging Solutions**

**Assembly Instructions for**  
**VisiGuard® Face Shield With ZipStrap®**  
**and**  
**VisiGuard® EcoShield with ZipStrap®**



VisiGuard® 2.0 Face Shield with ZipStrap®




VisiGuard® 3.0 EcoShield with ZipStrap®

The VisiGuard® 2.0 with ZipStrap® and the VisiGuard® 3.0 EcoShield with ZipStrap® come with a patented assembly process that utilizes an integrated ZipStrap® attached to each face shield.

## Step 1

Simply fold the ZipStrap® back and forth 3 to 4 times along the perforation to loosen it from the VisiGuard® Face Shield.

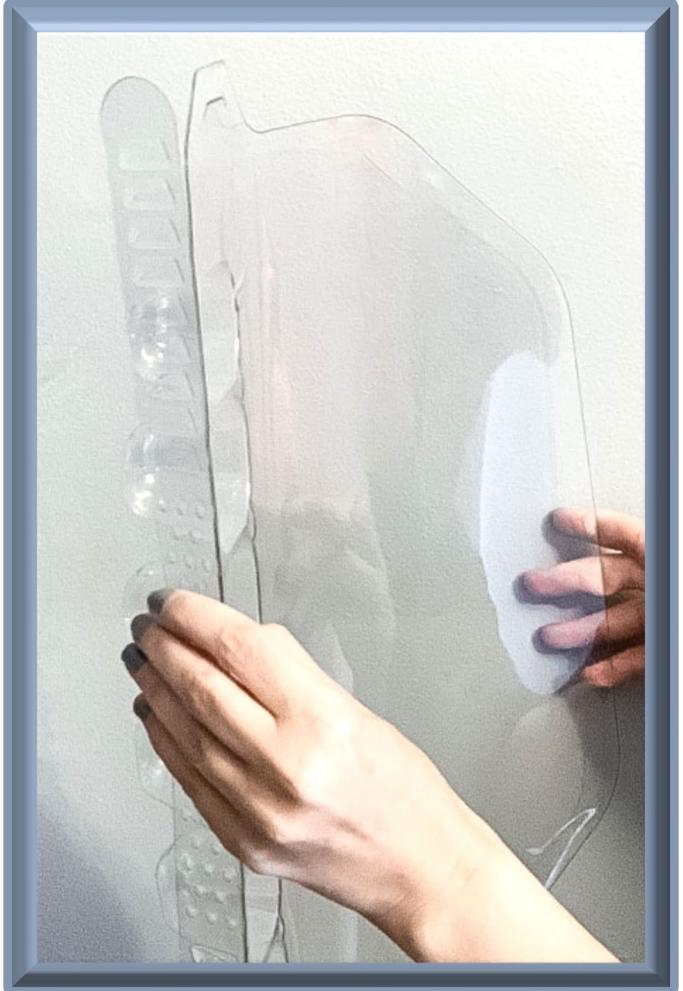

## Step 2

Remove the ZipStrap® by pulling away from the VisiGuard® Face Shield.




## Step 3




Insert the ZipStrap® into the pre-cut slits on both sides of the VisiGuard® Face Shield. Set the ZipStrap® on the first or second tension notch on both sides of the shield.



## Step 4

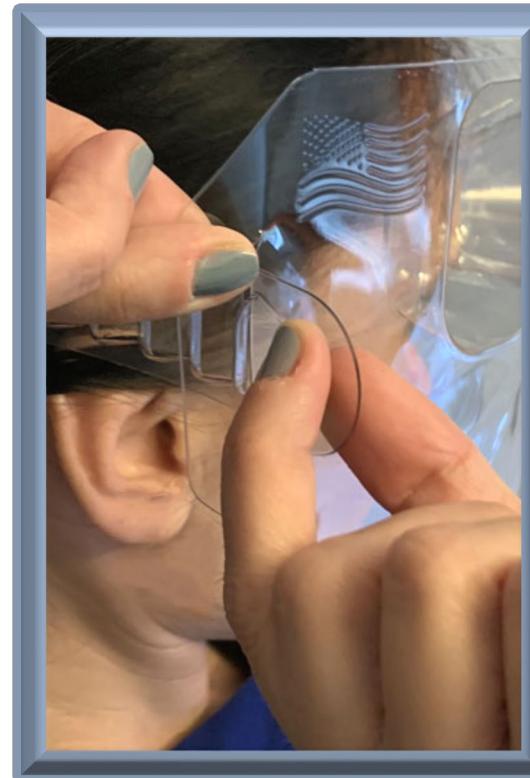

Place the VisiGuard® Face Shield with ZipStrap® over your head and adjust the tension of the ZipStrap® on each side of your head by pulling the strap further through the slots. Set the tension of the ZipStrap® to your liking.

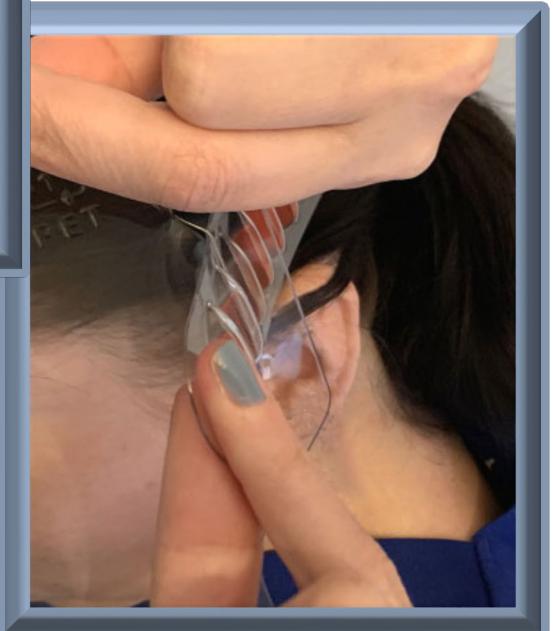

That's It! Now enjoy class leading splash and droplet facial protection!



VisiGuard® 2.0 Face Shield with ZipStrap®



VisiGuard® 3.0 EcoShield with ZipStrap®



Use only as a face shield to protect against fluid splashing or spattering. Not intended as protection from airborne particulates. This face shield has not been cleared for medical use by the U.S. Food and Drug Administration. This face shield has not been evaluated for protection from, or the prevention of, any diseases or infections or for any reduction in the risk of exposure to a virus, bacteria or fungi.

800-949-1141

VisiGuard® face shields are manufactured by VisiPak, a division of Sinclair & Rush, Inc., an ISO certified, multinational corporation located in St. Louis, MO since 1950.

Patent Pending



Sinclair & Rush, Inc.  
111 Manufacturers Drive  
Arnold, MO 63010